

Sehr geehrte Kundin, sehr geehrter Kunde,
wir freuen uns, dass Sie sich für unseren **EASYmaxx Aroma-Diffuser** entschieden haben. Sollten Sie Fragen zum Produkt haben, kontaktieren Sie den Kundenservice über unsere Website: **www.ds-group.de/kundenservice**

SYMBOLS



Gefahrenzeichen: Diese Symbole zeigen mögliche Gefahren an. Die dazugehörenden Sicherheitshinweise aufmerksam lesen und befolgen.



Ergänzende Informationen



Gebrauchsanleitung vor Benutzung lesen!



Gleichstrom



Schutzklasse III

SIGNALWÖRTER

Signalwörter bezeichnen Gefährdungen bei Nichtbeachtung der dazugehörigen Hinweise.

WARNUNG – mittleres Risiko, kann schwere Verletzung oder Tod zur Folge haben

HINWEIS – kann Sachschäden zur Folge haben

BESTIMMUNGSGEMÄßER GEBRAUCH

- Dieses Gerät ist zum Befeuchten und Erfrischen von Luft in Innenräumen vorgesehen. Zudem kann es als Stimmungslicht verwendet werden.
- Das Gerät ist für den privaten Gebrauch, nicht für eine gewerbliche Nutzung bestimmt.
- Das Gerät nur für den angegebenen Zweck und nur wie in der Gebrauchsanleitung beschrieben nutzen. Jede weitere Verwendung gilt als bestimmungswidrig.
- Von der Gewährleistung ausgeschlossen sind alle Mängel, die durch unsachgemäße Behandlung, Beschädigung, Verkalkung oder Reparaturversuche entstehen. Dies gilt auch für den normalen Verschleiß.

SICHERHEITSHINWEISE



WARNUNG: Alle Sicherheitshinweise, Anweisungen, Bilderungen und technischen Daten, mit denen dieses Gerät versehen ist, lesen. Versäumnisse bei der Einhaltung der Sicherheitshinweise und Anweisungen können elektrischen Schlag, Brand und/oder Verletzungen verursachen.

- Dieses Gerät kann von **Kindern** ab 8 Jahren sowie von Personen mit reduzierten physischen, sensorischen oder mentalen Fähigkeiten oder Mangel an Erfahrung und/oder Wissen benutzt werden, wenn sie beaufsichtigt oder bezüglich des sicheren Gebrauchs des Gerätes unterwiesen wurden und die daraus resultierenden Gefahren verstanden haben.
- **Kinder** dürfen nicht mit dem Gerät spielen.
- Reinigung und **Benutzer-Wartung** dürfen nicht durch Kinder durchgeführt werden, es sei denn, sie werden beaufsichtigt.
- Hohe Luftfeuchtigkeit kann das Wachstum von biologischen Organismen fördern. Das Wasser im Wassertank muss täglich gewechselt und der Wassertank alle drei Tage gründlich gereinigt werden, um die Entstehung gesundheitsschädlicher Mikroorganismen zu vermeiden.

- Das Gerät ist bei nicht vorhandener Aufsicht, beim Befüllen bzw. Entleeren des Wassertanks sowie vor dem Reinigen stets vom Netz zu trennen.
- Keine Veränderungen am Gerät vornehmen. Wenn das Gerät oder die Anschlussleitung beschädigt sind, müssen diese durch den Hersteller, Kundenservice oder eine Fachwerkstatt ersetzt bzw. repariert werden, um Gefährdungen zu vermeiden.



WARNUNG – Stromschlaggefahr

- Die Zerstäuber-Einheit und das Kabel niemals in Wasser tauchen!
- Sollte das Gerät ins Wasser fallen, sofort den Netzadapter aus der Steckdose ziehen. **Erst danach** das Gerät aus dem Wasser holen. Niemals versuchen, das Gerät aus dem Wasser zu ziehen, während es an das Stromnetz angeschlossen ist!
- Das Gerät und das Kabel niemals mit feuchten Händen berühren, wenn diese Komponenten an das Stromnetz angeschlossen sind.
- Das Gerät nicht verwenden, wenn es eine Fehlfunktion hatte oder ins Wasser gefallen ist. Vor erneuter Inbetriebnahme in einer Fachwerkstatt überprüfen lassen.

HINWEIS – Risiko von Material- und Sachschäden

- Das Gerät nicht benutzen, wenn es beschädigt ist.
- Das Gerät ausschalten, bevor es vom Strom getrennt wird.
- Das Gerät vom Stromnetz trennen, wenn ein Fehler auftritt oder bei einem Gewitter.
- Das Gerät nicht kippen o. Ä., wenn sich Wasser im Wassertank befindet.
- Die LEDs lassen sich nicht ersetzen.
- Das Gerät schützen vor Feuer und anderen Wärmequellen, Minustemperaturen, lang anhaltender Feuchtigkeit und Stößen.
- Nur Original-Zubehörteile des Herstellers verwenden, um die Funktionsweise des Gerätes nicht zu beeinträchtigen und eventuelle Schäden zu vermeiden.

LIEFERUMFANG

- 1 x Luftbefeuchter
- 2 x Filter
- 1 x Kabel (USB-A-Stecker auf Hohlstecker)
- 1 x Gebrauchsanleitung


Den Lieferumfang auf Vollständigkeit und die Bestandteile auf Transportschäden überprüfen. Bei Schäden nicht verwenden, sondern den Kundenservice kontaktieren. Eventuelle Folien, Aufkleber oder Transportschutz vom Gerät abnehmen. **Niemals das Typenschild und eventuelle Warnhinweise entfernen!**



Zusätzlich wird ein USB-Netzadapter benötigt. Dieser ist **nicht** im Lieferumfang enthalten.

AUF EINEN BLICK

- 1 Austrittsöffnung des Zerstäubers
- 2 Bedientaste:
 - 1 x: einschalten (mit LED)
 - 2 x: einschalten (ohne LED)
 - 3 x: ausschalten
- 3 Anschlussbuchse (Rückseite)
- 4 LEDs (Unterseite der Zerstäuber-Einheit)
- 5 Wassertank
- 6 Zerstäuber-Einheit
- 7 Filterhalter
- 8 Filter

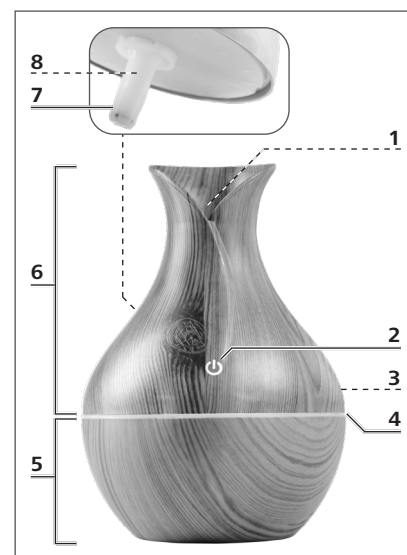



VORBEREITUNG

Beachten!

- Nur mit Leitungswasser oder destilliertem Wasser befüllen. Zusätzlich kann ein geeignetes Aromaöl zugegeben werden (max. 5 % der Füllmenge). Keine anderen Flüssigkeiten einfüllen.

1. Sicherstellen, dass das Gerät vom Stromnetz getrennt ist.
2. Die Zerstäuber-Einheit (6) im Uhrzeigersinn drehen und abnehmen.
3. Den Wassertank (5) mit max. 130 ml **kaltem** Wasser befüllen. Für einen angenehmen Geruch können dem Wasser ein paar Tropfen Aromaöl hinzugefügt werden.

Nicht überfüllen!

4. Sicherstellen, dass der Filterhalter (7) sowie ein Filter (8) an der Unterseite der Zerstäuber-Einheit eingesetzt sind.



Wir empfehlen, den Filter vor dem ersten Gebrauch sowie nach längerem Nichtgebrauch des Gerätes kurz in Wasser zu tränken, um Verzögerungen nach dem Einschalten zu verringern.

5. Die Zerstäuber-Einheit auf den befüllten Wassertank setzen und gegen den Uhrzeigersinn fixieren.
6. Das Kabel zuerst in die Anschlussbuchse (3) stecken und dann an eine Stromquelle mit USB-Schnittstelle anschließen (vorzugsweise über einen USB-Netzadapter an die Steckdose).

BENUTZUNG

Beachten!

- Einen Netzadapter nur an eine Steckdose anschließen, die mit den technischen Daten des Gerätes übereinstimmt. Die Steckdose muss auch nach dem Anschließen gut zugänglich sein, damit die Netzverbindung schnell getrennt werden kann.

1. **Einschalten:** Die Bedientaste (2) berühren.
 - 1 x: einschalten mit LED
 - 2 x: einschalten ohne LED
2. **Ausschalten:** Die Bedientaste erneut 1 x bzw. 2 x berühren.
3. Soll das Gerät nicht mehr verwendet werden, das USB-Kabel zunächst von der Stromquelle und anschließend vom Gerät trennen.

REINIGUNG UND AUFBEWAHRUNG

Beachten!

- Zum Reinigen keine scharfen oder scheuernden Reinigungsmittel oder Reinigungspads verwenden. Diese können die Oberflächen beschädigen.
- Sicherstellen, dass das Gerät vom Stromnetz getrennt ist.
 - Das Gehäuse bei Bedarf mit einem weichen, feuchten Tuch abwischen. Stärkere Verschmutzungen mit ein wenig Reinigungsmittel entfernen.
 - Den Wassertank alle drei Tage mit warmem Wasser und Spülmittel reinigen.
 - Bei Nichtbenutzung bzw. vor dem Verstauen des Gerätes eventuell vorhandenes Restwasser ausleeren und alle Teile vollständig trocknen lassen.
 - An einem trockenen Ort sowie für Kinder und Tiere unzugänglich aufbewahren.

TECHNISCHE DATEN

Artikelnummer:	16815
Modellnummer:	WR2410304
Spannungsversorgung:	5 V DC 1 A
Leistung:	3 W
Kapazität Wassertank:	max. 130 ml
Betriebsdauer:	ca. 4 Stunden (bei vollem Wassertank)
Verbrauch:	ca. 30–35 ml/h
ID Gebrauchsanleitung:	Z 16815 M DS V1 0525 as

ENTSORGUNG



Das Verpackungsmaterial umweltgerecht entsorgen und der Wertstoffsammlung zuführen.



Das nebenstehende Symbol (durchgestrichene Mülltonne mit Unterstrich) bedeutet, dass Altgeräte nicht in den Hausmüll, sondern in spezielle Sammel- und Rückgabesysteme gehören.

Besitzer von Altgeräten aus privaten Haushalten können diese bei den Sammelstellen der öffentlich-rechtlichen Entsorgungsträger oder bei den von Herstellern und Vertriebern im Sinne des ElektroG eingerichteten Rücknahmestellen unentgeltlich abgeben, damit sie einer umweltschonenden Entsorgung sowie einer Wiedergewinnung von wertvollen Rohstoffen zugeführt werden können. Bei einer unsachgemäßen Entsorgung können giftige Inhaltsstoffe in die Umwelt gelangen, die gesundheitsschädigende Wirkungen auf Menschen, Tiere und Pflanzen haben. Rücknahmepflichtig sind auch Geschäfte, die Elektro- und Elektronikgeräte auf dem Markt bereitstellen.

Die Abfallvermeidung leistet einen noch wertvolleren Beitrag zum Umweltschutz. Sofern möglich, ist daher neben einer weiteren eigenen Nutzung oder Reparatur auch die Abgabe an Zweitnutzer eine ökologisch wertvolle Alternative zur Entsorgung.

Alle Rechte vorbehalten.

DS Produkte GmbH, Stormarnring 14, 22145 Stapelfeld, Deutschland

Kundenservice:

Am Heisterbusch 1, 19258 Gallin, Deutschland • ☎ +49 38851 314650 *) • kundenservice@dspro.de

*) Anruf in das deutsche Festnetz zum Tarif Ihres Anbieters.

Dear Customer,

We are delighted that you have chosen our **EASYmaxx aroma diffuser**. If you have any questions about the product, contact the customer service department via our website: www.ds-group.de/kundenservice

SYMBOLS



Danger symbols: These symbols indicate possible dangers. Read the associated safety notices carefully and follow them.



Supplementary information



Read the operating instructions before use!



Direct current



Protection class III

SIGNAL WORDS

Signal words indicate hazards if the associated notices are not followed.

WARNING – medium risk, may result in serious injury or death

NOTICE – may result in damage to material

INTENDED USE

- This device is intended to be used to humidify and refresh air indoors. In addition, it can be used as a mood light.
- The device is for personal use only and is not intended for commercial applications.
- Use the device only for the specified purpose and as described in the operating instructions. Any other use is deemed to be improper.
- The warranty does not cover faults caused by incorrect handling, damage, calcification or attempted repairs. The same applies to normal wear and tear.

SAFETY NOTICES



WARNING: Read all safety notices, instructions, illustrations and technical data provided with this device. Failure to follow the safety notices and instructions may result in electric shock, fire and / or injuries.

- This device may be used by **children** aged 8 and over and by people with reduced physical, sensory or mental abilities or a lack of experience and / or knowledge if they are supervised or have received instruction on how to use the device safely and have understood the dangers resulting from failure to comply with the relevant safety precautions.
- **Children** must not play with the device.
- Cleaning and **user maintenance** must not be carried out by children, unless they are supervised.
- High humidity can promote the growth of biological organisms. The water in the water tank needs to be changed daily and the water tank needs to be cleaned every three days thoroughly in order to prevent the formation of harmful microorganisms.
- The device must always be disconnected from the mains power when it is not being supervised, when filling or emptying the water tank, and before cleaning it.

- Do not make any modifications to the device. If the device or the connecting cable are damaged, they must be replaced or repaired by the manufacturer, customer service department or a specialist workshop in order to avoid any hazards.



WARNING – Danger of Electric Shock

- Never immerse the atomiser unit and the cable in water!
- If the device does fall into water, pull the mains adapter out of the plug socket immediately. **Only after this** should you retrieve the device from the water. Never attempt to pull the device out of the water while it is connected to the mains power!
- Never touch the device and the cable with wet hands when these components are connected to the mains power.
- Do not use the device if it has malfunctioned or fallen into water. Have it checked in a specialist workshop before using it again.

NOTICE – Risk of Damage to Material and Property

- Do not use the device if it is damaged.
- Switch off the device before it is disconnected from the mains power.
- Disconnect the device from the mains power if a fault occurs or in a thunder-storm.
- Do not tip the device or do something similar when there is water in the water tank.
- The LEDs cannot be replaced.
- Protect the device from fire and other heat sources, sub-zero temperatures, persistent moisture and impacts.
- Use only original accessories from the manufacturer in order to guarantee that there is no interference that may prevent the device from working and to avoid possible damage.

ITEMS SUPPLIED

- 1 x Humidifier
- 2 x Filter
- 1 x Cable (USB-A plug to barrel plug)
- 1 x Operating instructions

Check the items supplied for completeness and the components for transport damage. If you find any damage, do not use the device but contact our customer service department.


Remove any possible films, stickers or transport protection from the device. **Never remove the rating plate and any possible warnings!**



Additionally, a USB power adapter is required. This is **not** supplied with the product.

AT A GLANCE

- 1 Outlet opening of the atomiser
- 2 Operating button:
 - 1x: Switch on (with LED)
 - 2x: Switch on (without LED)
 - 3x: Switch off
- 3 Connecting socket (back)
- 4 LEDs (underside of the atomiser unit)
- 5 Water tank
- 6 Atomiser unit
- 7 Filter holder
- 8 Filter

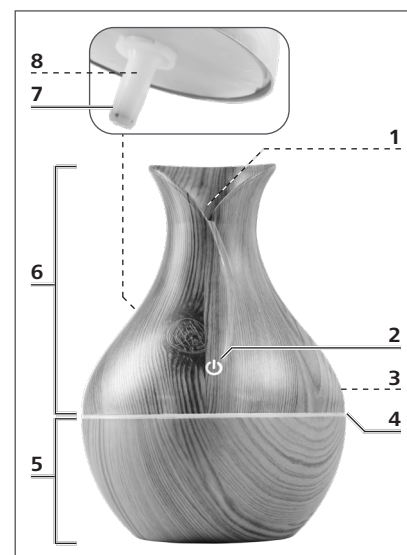



PREPARATION

Please Note!

- Only fill with tap water or distilled water. You can also add a suitable aromatic oil (max. 5% of the fill level). Do not use any other liquids.

1. Make sure that the device is disconnected to the mains power.
2. Twist the atomiser unit (6) clockwise and take it off.
3. Fill the water tank (5) with a maximum of 130 ml of **cold** water. You can add a few drops of aromatic oil to the water to produce a pleasant smell. **Do not overfill it!**
4. Make sure the filter holder (7) and a filter (8) are inserted at the bottom of the atomizer unit.



We recommend briefly soaking the filter in water before first use and after a long period of non-use to reduce delays after switching on.

5. Place the atomiser unit on the filled water tank and fix it by twisting it anti-clockwise.
6. First plug the USB cable into the connecting socket (3) and then connect to a power source with USB interface (preferably via a USB mains adapter to the plug socket).

USE

Please Note!

- Only connect a USB power adapter to a plug socket that matches the technical data of the device. The plug socket must also be readily accessible after connection so that the connection to the mains can quickly be isolated.

1. **Switch on:** Touch the operating button (2).
 - 1 x: switch on with LED
 - 2 x: switch on without LED
2. **Switch off:** Touch the operating button again 1 x or 2 x.
3. If the device is no longer going to be used, first disconnect the USB cable from the power source and then from the device.

CLEANING AND STORAGE

Please Note!

- Do not use any sharp or abrasive cleaning agents or cleaning pads to clean the device. These may damage the surfaces.

- Make sure that the device is disconnected to the mains power.
- Wipe down the housing with a soft, damp cloth. Remove more stubborn dirt with a little detergent.
- Clean the water tank every three days with warm water and detergent.
- If the device is not being used or before storing away the device, empty out any remaining water and allow all parts to dry completely.
- Store in a dry place and out of the reach of children and animals.

TECHNICAL DATA

Article number:	16815
Model number:	WR2410304
Power supply:	5 V DC 1 A
Power:	3 W
Capacity of water tank:	max. 130 ml
Operating time:	approx. 4 hours (with a full water tank)
Consumption:	approx. 30–35 ml/h
ID of operating instructions:	Z 16815 M DS V1 0525 as

DISPOSAL



Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.



The adjacent symbol (crossed-out bin underlined) means that used devices should not be disposed of in the domestic waste, but should instead be taken to special collection and return systems.

Owners of used devices from private households can take them free of charge to the collection points of the public waste disposal authorities or the disposal points which are set up by manufacturers and distributors under the Electrical Equipment Act so that they can be disposed of in an environmentally friendly way and valuable raw materials can be recovered. If they are not disposed of properly, toxic ingredients may escape into the environment and cause harm to the health of humans, animals and plants. Businesses which market electrical and electronic devices are also obliged to take back used devices.

Waste prevention makes an even more valuable contribution to protecting the environment. This means if possible, as well as continuing to use or repair, passing it on to another user also represents an ecologically beneficial alternative to disposal.

All rights reserved.

DS Produkte GmbH, Stormarnring 14, 22145 Stapelfeld, Germany

Customer Service:

Am Heisterbusch 1, 19258 Gallin, Germany • ☎ +49 38851 314650 *) • kundenservice@dspro.de

*) Calls to German landlines are subject to your provider's charges.